


Functions Diagram


Delay ON star / delta

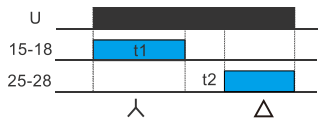


Setting instructions

	Knob 1: delay gear setting, "s" for second, "m" for minute.
	Knob 2: fine adjustment of delay time, 10% ~ 100% adjustable.
Delay time = knob 1 × knob 2. Example 1: it needs to be set for 5 seconds. You can set knob 1 to 10s, knob 2 to 50%, and delay time = 10s × 50% = 5s. Example 2: it needs to be set for 8 minutes. You can set knob 1 to 10m, knob 2 to 80%, and delay time = 10m × 80% = 8m.	

Wiring Diagram

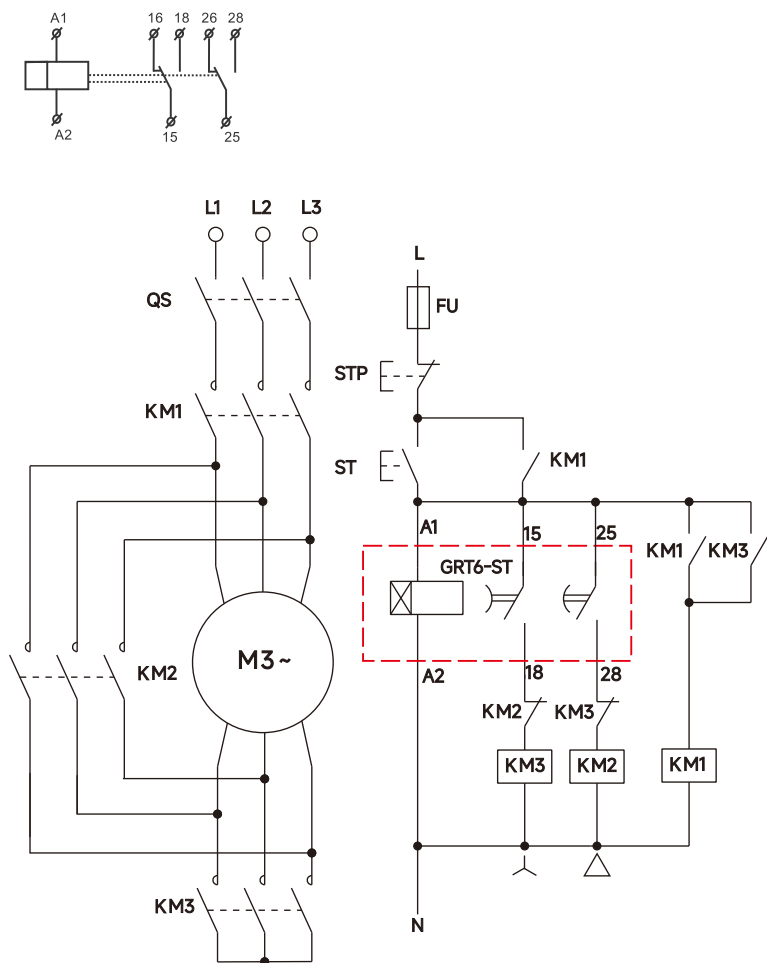

Dimensions(mm)

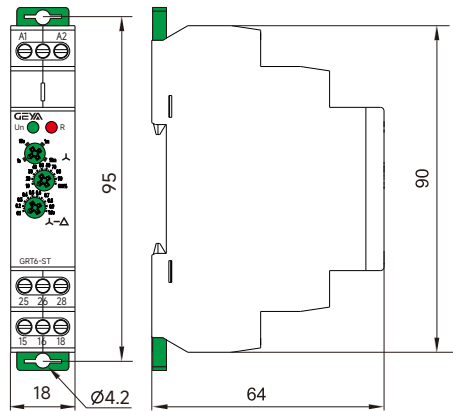

Disposal of Electrical Waste
All electrical waste should be disposed of in compliance with current WEEE regulations.



Caution
The products must be installed by qualified electricians. All and any electrical connections of the product shall comply with the appropriate safety standards.